



# SSC-JE

STAFF SELECTION COMMISSION

## CIVIL ENGINEERING

### STUDY MATERIAL

## ENVIRONMENTAL ENGINEERING

### PART-A

**CONTENT**


1. WATER DEMAND.....	3-22
2. SOURCES OF WATER .....	23-42
3. CONDUITS FOR TRANSPORTING WATER.....	43-56
4. QUALITY CONTROL OF WATER SUPPLY.....	57-73
5. PURIFICATION OF WATER SUPPLY .....	74-102
6. DISTRIBUTION SYSTEM .....	-103-114
7. SSC-JE PRACTICE SET .....	115-124



## CHAPTER-1

### WATER DEMAND

Major components of a water supply scheme are:



#### Classification of water demand for a city

##### 1. Domestic water Demand:

- This includes the water required in private buildings for drinking, cooking bathing, etc. Which may vary according to living conditions of consumers.
- As per IS: 1172-1993, the minimum domestic consumption for a city with full flushing system should be **200l/h/d** (*litre per head per day*) or *lpcd* (*litre per capita per day*) and for economically high section and LIG colonies it can be reduced to 135 *lpcd*.
- The domestic water consumption usually amounts to 50-60% of the total water consumption.

##### 2. Industrial Water Demand:

- It represents the water demand of industries, which are either existing or likely to be established in future.
- This water demand vary with the number and types of industries present in the city.
- In industrial cities, water demand may be 450 *lpcd* and in case of small-scattered industries it may be as low as 50 *lpcd*.

##### 3. Institutional and Commercial water demand:

- Water requirement for institutions like hospitals, hotels, railway stations, school, offices come under this category.
- In general, water demand for it is 20 *lpcd* which may go up to 50 *lpcd* for highly commercialized cities.
- Water demand for certain institutions and commercials:

Offices: 45-90 *lpcd* (l/h/d)

Schools: 45-90 (Day scholars) *lpcd*

135-225 (Residentials) *lpcd*

Hotels: 180*lpcd* (per bed)

Airports: 70 *lpcd*

Hospitals (including laundry) :350 (per bed)(No. of beds < 100)

: 450 (per bed) (No. of beds > 100)

Cinema Halls: 15 *lpcd* (per seat)

**4. Demand for public uses:**

- This includes the water requirement for public utility purposes.
- Generally, water demand for it is taken as 10 lpcd.
- Water demand in this category is normally taken as a nominal value not exceeding 5% of total consumption.

**5. Fire Demand:**

- Fire hydrants are usually fitted in the water mains at about 100-150m apart and minimum water pressure available at fire hydrant should be  $100 \text{ KN/m}^2 - 150 \text{ KN/m}^2$  and should be maintained even after 4-5 hrs. of constant use of it.
- The per capita fire demand hardly amounts to **1 lpcd** and hence it is generally ignored while computing the total per capita water requirement of a city.

**Note:** The quantity of water required for extinguishing fire is not very large but this water should be easily available and kept always stored in storage reservoir.

**6. Water required to compensate losses in theft and wastes:**

- This quantity may be as high as 15% of the total consumption.

**Per Capita Demand (q):**

- It is defined as the annual average amount of daily water required by one person including water for domestic use, industrial and commercial use, public use, wastes etc.

$$\therefore q(l/h/d) = \frac{\text{Total yearly water requirement of the city (v)}}{365 \times \text{Design population}}$$

- For an average Indian city, as per IS recommendation, the value of q is 335 lpcd.

**Break up of per capita demand (q) for an Average Indian City**

Use	Demand in l/h/d
Domestic use	200
Industrial use	50
Commercial use	20
Civic or public use	10
Wastes and thefts, et	55
	Total = 335 ( Per Capita Demand (q) )

Table: Water Requirements for Buildings other than Residences

SI No. (1)	Type of Building (2)	Consumption Per Day, litres (3)
i)	Factories where bath rooms are required to be provided	45 per head
ii)	Factories where no bath rooms are required to be provided	30 per head
iii)	Hospital (including laundry) :	
	a) Number of beds not exceeding 100	340 per head
	b) Number of beds exceeding 100	450 per head
iv)	Nurses' homes and medical quarters	135 per head
v)	Hostels	135 per head
vi)	Hotel	180 per head
vii)	Offices	45 per head
viii)	Restaurants	70 per seat
ix)	Cinemas, concert halls and theatres	15 per seat
x)	Schools:	
	a) Day schools	45 per head
	b) Boarding schools	135 per head

NOTE—For fire demand in buildings refer IS 9668 : 1981.

### Factors Affecting Water Demand:

- I. Size of city

### Variations in per capita demand with population in India

S.No.	Population	Per Capita Demand in litres/day/person*
1.	Less than 20,000	110
2.	20,000—50,000	110—150
3.	50,000—2 lakhs	150—240
4.	2 lakhs—5 lakhs	240—275
5.	5 lakhs — 10 lakhs	275—335
6.	Over 10 lakhs	335**—360




**Note :**

The above figures are liable to variation up to 25%

For Indian conditions, I.S. code permits maximum value of 335 lpcd

- II. Climatic condition
- III. Habits of people
- IV. Industrial and commercial activities
- V. Water quality
- VI. Pressure in distribution system
- VII. Development of sewerage facilities
- VIII. System of water supply
- IX. Policy of metering and method of charging

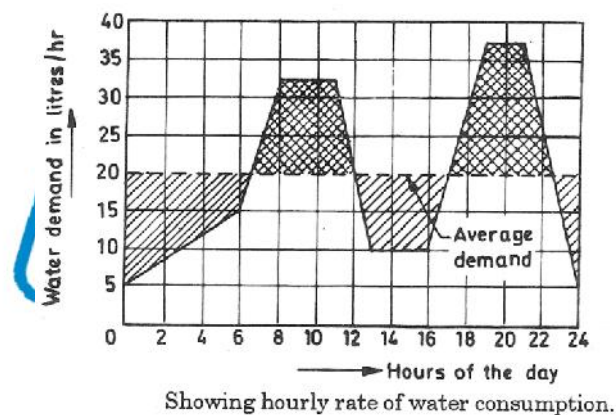**Variation in demand (or Draft)****(i) Maximum daily Consumption:  $q_{\max}$** 

$$q_{\max} = 1.8 \times q_{\text{avg.}}$$

Where,  $q_{\text{avg.}}$  = Average daily demand or Annual Average daily demand.

**(ii) Maximum hourly consumption:  $q_{h-\max}$  or Peak demand**

$q_{h-\max} = 1.5 \times$  Average hourly consumption of maximum Daily

$$= 1.5 \times \left( \frac{q_{\max}}{24} \right) = 1.5 \times \frac{(1.8 q_{\text{avg.}})}{24}$$

$$\therefore q_{h-\max} = 2.7 q_{\text{avg}}$$

**(iii) Maximum weekly consumption**

Maximum weekly consumption =  $1.48 \times$  Average weekly consumption

**(iv) Maximum monthly consumption**

Maximum monthly consumption =  $1.28 \times$  Average monthly consumption.

**Coincident Draft:**

- For general community propose:

Total draft (demand) = Maximum of

- (a) Sum of maximum daily demand and fire demand

**OR**

- (b) Maximum hourly demand

Where, the summation of maximum Daily demand and fire demands are known as *coincident draft*.

**Recommendations for designing the capacities of different components of water supply scheme:**

- The source of supply may be designed for maximum daily consumption or sometimes for average daily consumption.
- The pipe mains may be designed for maximum daily consumption.
- Filter and other units of a water treatment plant and pumps for lifting water may be designed for maximum daily consumption.
- The distribution system, including the pipes carrying water from service reservoir to distribution system may be designed for maximum hourly draft of the maximum day or coincident draft, whichever is more.
- The service reservoir is designed to take care of the hourly fluctuations, fire demand, emergency reserve etc.
- **Water supply projects, under normal circumstances are designed for a design period of 30 years.**

S.No.	Item	Design period in years
1.	Storage by dams	50
2.	Infiltration works	30
3.	Pumping pump house	30
	electric motors and pumps	15
4.	Water treatment units	15
5.	Pipe connections to the several treatment units and other small appurtenances	30
6.	Raw water and clear water conveying	30
7.	Clear water reservoirs at the head works, Balancing tanks, and Service reservoirs (over head or ground level)	15
8.	Distribution system	30

### Population forecasting methods:

- Some of the following methods are used when design period is small, and some are used when the design periods are large.
- These methods are based on the laws of probability.

**Note:** Main factors responsible for changes in population are Births, Deaths and Migrations.

#### 1. Arithmetic Increase Method:

- Based on the assumption that the population increases at a constant rate.

$$P_n = P_0 + n.\bar{x}$$

Where,

$P_n$  = Forecasted population after 'n' decades from the present

$P_0$  = Population at present (i.e. last known census)

$n$  = Number of decades between present and future

$\bar{x}$  = Average (*Arithmetic mean*) of population increases in the known decades.

It is suitable for old cities.

#### 2. Geometric Increases Method:

- Here, % decadal growth rate ( $r$ ) is assumed to be constant.
- This method is also known as "*uniform increase method*"

$$P_n = P_0 \left( 1 + \frac{r}{100} \right)^n$$



Where,  $P_n, P_0$  have same meaning as mentioned in (1)

$r$  = Assumed growth rate (%)

- Method of determining assumed growth rate ( $r$ )

$$r = \sqrt[t]{\frac{P_2}{P_1}} - 1$$

Where,

$P_2$  = Final known population

$P_1$  = Initial known population

$t$  = Number of decades (period) between  $P_1$  and  $P_2$

$r_i = \frac{\text{Increase in population}}{\text{original population}} \times 100$  are computed for each known decade,

i.e.  $r_1, r_2, r_3, \dots, r_n$

Hence average value of ' $r$ ' is found as:

- (a) Arithmetic average method: **(Preferred)**

$$r = \frac{r_1 + r_2 + r_3 + \dots + r_n}{t}$$

- (b) Geometric average method:

$$r = \sqrt[t]{r_1 \cdot r_2 \cdot \dots \cdot r_n}$$

It gives the highest value and is best suited for new cities.

**Note:** The "GOI Manual on water treatment" recommends geometric mean method.

### 3. Incremental Increase Method or Method of Varying Increment:

- Here % decadal growth rate is not assumed to be constant.

$$P_n = P_0 + n \cdot \bar{x} + \frac{n(n+1)}{2} \cdot \bar{y}$$

Where,  $\bar{x}$  = average increase in population of known decades

$\bar{y}$  = Average of incremental increases of the known decades.

- The results obtained by this method is somewhere between the results given by arithmetic increase method and geometric increase method. Hence, it is considered to be giving quite satisfactory results and suitable for both old and new cities.

### 4. Decreasing rate of growth method:

- This method is applicable only in cases, where the rate of growth shows a downward trend.

- In this method, the average decrease in the percentage increase is calculated and then subtracted from the latest percentage increase for each successive decade.

### Steps:

1-Calculate the increase in population ( $\Delta x$ ) between  $P_r$  and  $P_{r+1}$  ( $r = 0, 1, 2 \dots$ )

2-Calculate percentage increase in population i.e.  $\left( r_i = \frac{\Delta x}{P_r} \times 100\% \right)$

3-Calculate decrease in percentage increase i.e. ( $\Delta r = r_i - r_{i+1}$ ,  $i = 1, 2, 3, \dots$ )

4-Forecasted population,  $P_n$  is given as:

$$P_2 = P_1 + \left( \frac{r_0' - \bar{r}}{100} \right) P_1$$

Where,  $\bar{r}$  = mean of values of  $r_1, r_2, \dots, r_n$

$P_1$  = Population of at present (i.e. last know census)

$P_2$  = Forecasted population in next decade


$r_0'$  = percentage Increase between present population and last decade population

### 5. Simple Graphical Method:

- A graph is plotted from the available data, between time and population and the curve is smoothly extended up to the desired year to get the desired value.
- An approximate method.

### Comparative Graphical Method:

- Cities of similar conditions and characteristics as that of city under consideration ( $x$ ) are selected and a graph is plotted for population growth for all this selected city to find future population of the city ( $X$ ).

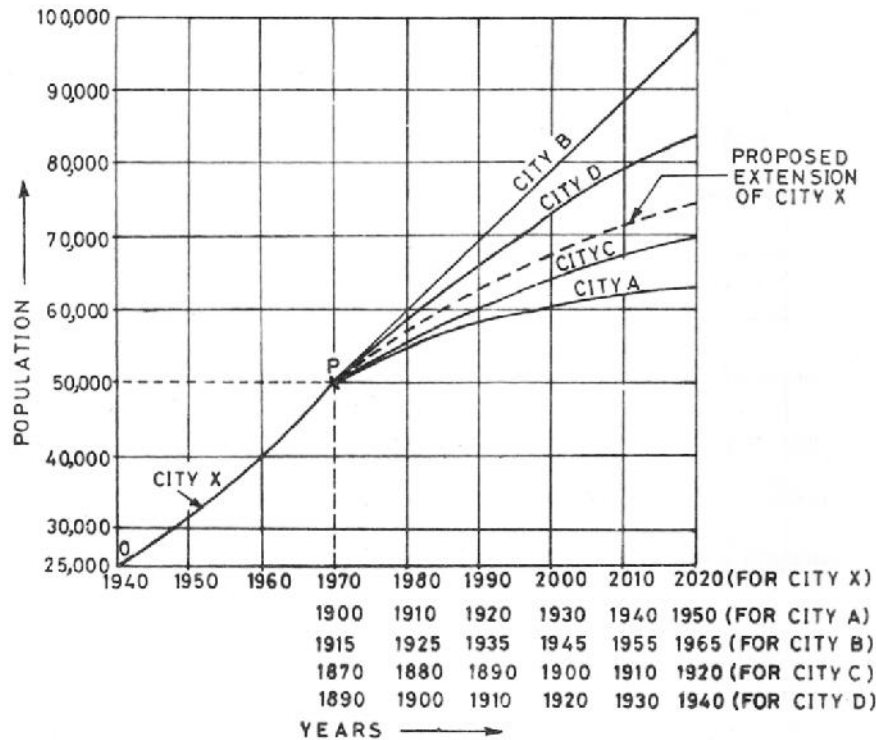

#### 6. Master plan method or zoning method:

- Applicable for big and metropolitan cities.
- A master plan is prepared for a city to regulate the development schemes.

#### 7. The Ratio method or the approximate method:

- In this method, the city's census population record is expressed as percentage of the population of whole country.
- This method is suitable for those areas whose growth is parallel to the national growth.

#### 8. The Logistic Curve Method:

- Under normal conditions, the population of a city will grow as per the logistic curve as shown in figure.

# To buy Complete Course Materials

## Contact: 9990657855, 9278800100


Email : eiidelhi@gmail.com

Website : www.sscje.com

Classroom Coaching Program

Postal Coaching Program

Online Test Series

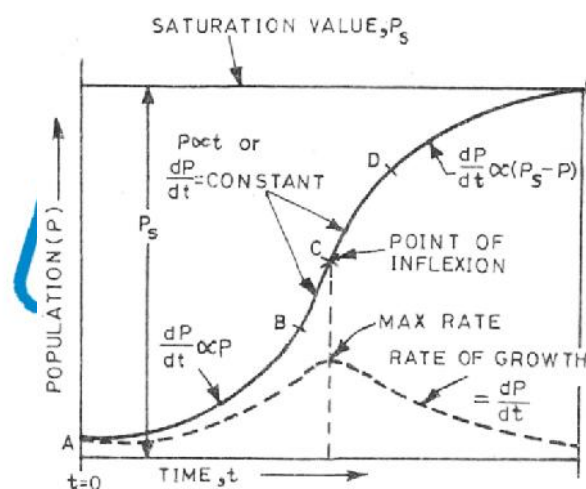

**Figure:** Ideal population growth curve, called logistic curve.

- P.F. Verhulst gave a mathematical solution to the logistic curve and defined the entire curve AD by an autocatalytic first order equation as given:

$$\log_e \left( \frac{P_s - P}{P} \right) - \log_e \left( \frac{P_s - P_0}{P_0} \right) = -k \cdot P_s \cdot t$$

Where  $P_0$  = Population at the starting point of curve A.

$P_s$  = Saturation population

$P$  = Population at any time 't' from the origin A.

$K$  = Constant

On solving we get:

$$P = \frac{P_s}{1 + m \cdot \log_e^{-1}(nt)}$$